



RollGrip™

How to mount: (Screws included)




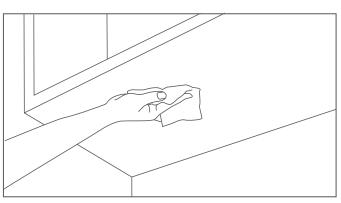


1 Clean underside of shelf and dry completely.

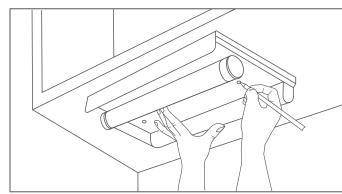

2 Place kitchen roll holder in desired position and mark screw holes with a pencil.

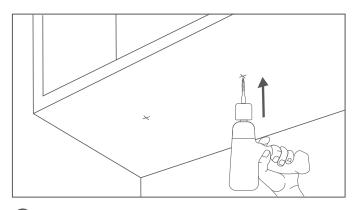

3 Make a small hole at each pencil mark with a drill.

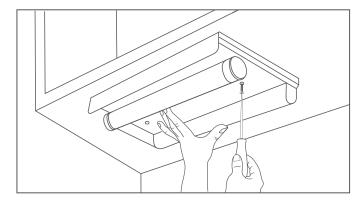

4 Align kitchen roll holder to screw holes and fix into place using screws provided.

